



Floor Ballast for Teaching Station

Floor trenching required for Teaching Station

Floor ballast located within station perimeter

Station is fixed but ballast should be disconnect point (standard Data/power jacks)

See data sheets for required conduit / power / data feeds

Prefer ballast be flush with floor. Otherwise, max 1" protrusion above floor

Cover for ballast if required in data sheets


Located approx 7' from wall (per Teaching Station location. Teaching Station has a hollow base, but room is limited, so it is preferred that the connections be near the classroom side of the unit)

Shown example: OISE 5th floor south, 2009 installation



footprint of Teaching Station

ballast unit for Teaching Station (incomplete - these cables to be finished with standard data jacks)

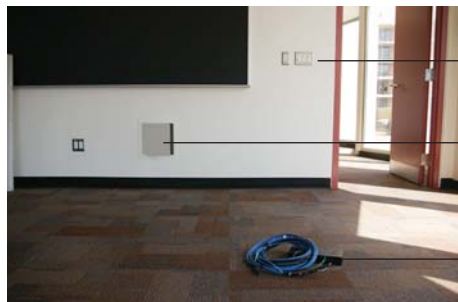

lighting and screen controls

wall av access panel, for access to conduit feeds

ballast unit